

Please perform the following steps in order to maximize the usage of LINKYO Compatible Brother DR420 Drum Unit.

You can also use the following steps if the new replacement drum is giving you an error or the drum LED light is on or flashing.

For HL Series (*except HL-2280DW*),

- a. With the power on, open the front cover
- b. Press and hold the **'Go'** button for a few seconds
- c. All the LED light should be on
- d. Release the **'Go'** button.
- e. Close the front cover, and your printer should be ready to print

For MFC Series,

- a. With the power on, open the front cover
- b. Press the 'Options' (or Clear or Back) key**
- c. The LCD will display 'Replace Drum' with options of 1 for Yes and 2 for No
- d. Press **1** for Yes
- e. The LCD will display Accepted followed by 'Cover is open'
- f. Close the front cover, and your printer should be ready to print

For DCP Series & HL-2280DW,

- a. With the power on, open the front cover
- b. Press **'Clear' or 'Clear/Back'** on the right side of LCD screen
- c. Press the **Up Arrow** key to reset drum counter
- d. The LCD will display Accepted.
- e. Close the front cover, and your printer should be ready to print

If none of the above work, please call 1-888-434-1888 and our customer service is more than happy to assist you.

Thank you for choosing LINKYO's cartridges.