



Please perform the following steps in order to maximize the usage of LINKYO Compatible Brother DR630 Drum Unit.

For HL L2300,

- a. With the power on, open the front cover.
- b. Press and hold the '**Go**' for a four seconds.
- c. All the LED Light should be on (light up).
- d. Release the '**Go**'.
- e. Close the front cover and your printer should be ready to print.




For HL L2340, L2360 & L2365,

- a. With the power on, open the front cover.
- b. Press and hold the '**OK**' for two seconds to display '**Drum Unit**' & Press '**OK**'.
- c. Press the '**Up**' arrow Key to display '**Reset**' and reset the drum counter.
- d. Close the front cover and your printer should be ready to print.

For MFC L2700; DCP L2500, L2520 & L2540,

- a. With the power on, open the front cover.
- b. Press and hold the '**OK**' for two seconds.
- c. Press the '**Up**' arrow key or '**1**' to reset the drum counter.
- d. Close the front cover and your printer should be ready to print.

For MFC L2720 & L2740; DCP L2560, HL L2380,

- a. With the power on, open the front cover.
- b. Press the  **Clear** or **Back** to interrupt any error.
- c. Press  (**Settings**) > **All Settings** > **Machine Info.** > **Parts Life**.
- d. **Press and hold #** until the display (LCD) message changes.
- e. Press **Drum**.
- f. Press **Yes**.
- g. Press  (**Home**).

Thank you for choosing LINKYO's product. If you need further assistance, please call 1-888-434-1888 and our customer service is more than happy to assist you.