






Please perform the following steps in order to maximize the usage of LINKYO Compatible Brother DR820 Drum Unit.

MUST perform the following to manually reset the drum counter of your printer upon installation of new drum.

For HL L5000, 5100, 5200 & 6200,

- a. With the power on, open the front cover.
- b. Press and hold the '**OK**' for two seconds to display '**Drum Unit**' & Press '**Ok**'.
- c. Press the '**Up**' arrow Key to display '**Reset**' and reset the drum counter.
- d. Close the front cover and your printer should be ready to print.

For HL L6300, 6400; MFC & DCP,

- a. With the power on, open the front cover.
- b. Press the  **Clear** or **Back** to interrupt any error.
- c. Press  **(Settings) > All Settings > Machine Info. > Parts Life**.
- d. **Press and hold #** until the display (LCD) message changes.
- e. Press **Drum**.
- f. Press **Yes**.
- g. Press  **(Home)**.

Thank you for choosing LINKYO's product. If you need further assistance, please call 1-888-434-1888 and our customer service is more than happy to assist you.