

## PLEASE READ THIS FIRST

Please perform the following steps in order to maximize the usage of LINKYO Compatible Brother TN450 Black Toner Cartridge. You can also use these steps if your new replacement toner cartridge is giving you an error or low toner LED light is on or flashing after installation.

For HL Series (2130, 2220, 2230, 2240, 2250, 2270),

- a. With the power on, open the front cover.
- b. Turn the printer off.
- c. Press and Hold the '**GO**' Button while turning the printer on.
- d. All LED light should be on.
- e. Release the '**GO**' Button
- f. Press the '**GO**' Button **2 times**.
- g. Pause 10 seconds.
- h. Press the '**GO**' Button **5 times**.
- i. The TONER LED light should be off.
- j. The ERROR LED light should be on or flashing.
- k. Close the cover. The **READY** LED light should be the only one that is on.
- l. Turn off the printer.
- m. Turn on the printer and your printer is ready to print.

For MFC Series (7360, 7460, 7470, 7860),

- a. Open Front Cover
- b. Press '**CLEAR/BACK**'.
- c. LCD Screen will show '**Replace Drum? 1.Yes 2.No**'.
- d. Press \* **0 0** (The keys has to be entered quickly and in order).
- e. Press '**OK**'.
- f. LCD Screen will show '**Accepted**' or '**Cover is open**'.
- g. Close the cover and your printer is ready to print.

For HL-2280 & DCP Series (7055, 7057, 7060, 7062, 7070),

- a. Open Front Cover
- b. Press '**CLEAR/BACK**'.
- c. Press '**Start**'.
- d. Press '**Down**' or '**Down Arrow**'.
- e. Press '**Up**' or '**Up Arrow**'.
- f. LCD Screen will show '**0 0**'.
- g. Press '**OK**'.
- h. Close the cover and your printer is ready to print.