

**Please perform the following steps in order to maximize the usage of LINKYO Replacement for Brother TN660 High Yield Toner Cartridge**

For HL L2300, L2340, L2360 & L2365,

- a. With the power on, open the front cover.
- b. Turn off the printer.
- c. Hold the **GO** Button while turning the printer on.
- d. After 3 seconds release the GO Button.
- e. Screen will read "**User Mode**".
- f. Press the **GO** button 9 times.
- g. Wifi LED will flash once.
- h. Press the **GO** Button 5 times.
- i. Close the front cover and your printer should be ready to print.

For MFC L2700; DCP L2500, L2520

- a. With the power on, open the front cover.
- b. Press and hold the '**OK**' for a few seconds.
- c. Screen should read "**Replace Drum**".
- d. Do NOT follow prompts on screen.
- e. Type in \* **0 0** (Star Zero Zero) on your keypad.
- f. Close the front cover and your printer should be ready to print.

For MFC L2540 – ONLY

- a. With the power on, open the front cover.
- b. Press and hold the '**OK**' for a few seconds.
- c. Screen should read "**Replace Drum**".
- d. Do NOT follow prompts on screen.
- e. Press "**Start**"
- f. Press "**Up arrow**"
- g. Press "**Down arrow**"
- h. The screen will read **0 0**
- i. Press "**OK**"
- f. Close the front cover and your printer should be ready to print.

For MFC L2720 & L2740; DCP L2560, HL L2380,

- a. With the power on, open the front cover.
- b. Press and Hold the **#** button for 5 seconds.
- c. Toner Menu will appear on screen.
- d. Select the **TNR-HC**.
- e. Select Yes to reset
- f. Close the front cover and your printer should be ready to print.