



Please perform the following steps in order to maximize the usage of LINKYO Replacement for Brother DR730 Drum Unit.


For HL-L2350DW, HL-L2370DW, HL-L2370DW XL:

- a. Make sure power is on, and front cover is closed
- b. Press **OK** and ▲ at the same time
- c. Press **OK** to select “**Drum**”
- d. Press ▼ to reset the drum counter
- e. Your printer should be ready to print

For DCP-L2550DW, HL-L2390DW, MFC-L2710DW:

- a. Make sure power is on, and front cover is closed
- b. Press **OK** and ▲ at the same time
- c. Press **OK** to select “**Drum**”
- d. Press ▲ to reset the drum counter
- e. Your printer should be ready to print

For HL-L2395DW, MFC-L2350DW, MFC-L2750DW:

- a. Make sure power is on, and front cover is closed
- b. Press and hold  on the screen for around 5 seconds until a menu pop up
- c. Press “**Drum**”
- d. Press “**Yes**” to reset drum counter
- e. Your printer should be ready to print

If none of the above work, please call 1-888-434-1888 and our customer service is more than happy to assist you.

Thank you for choosing LINKYO’s cartridges!